
How to solve the problem of opening the tray DVD PHILIPS DVDR3455H Status BLOCKED

1. Open the DVD cover removing seven screws:

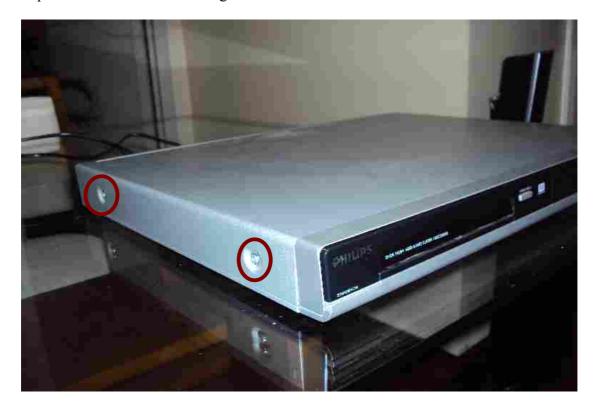









2. Remove four screws and DVD player, after the power cord from the data:

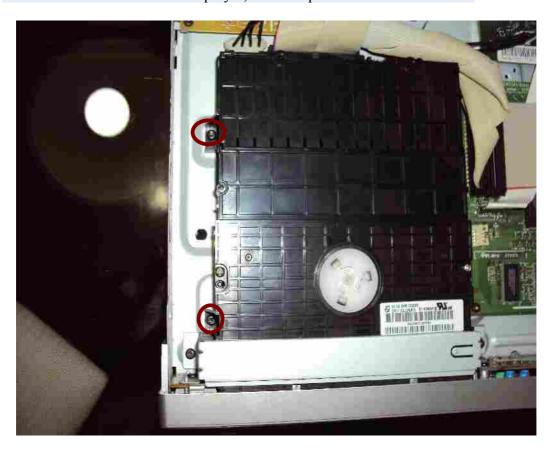

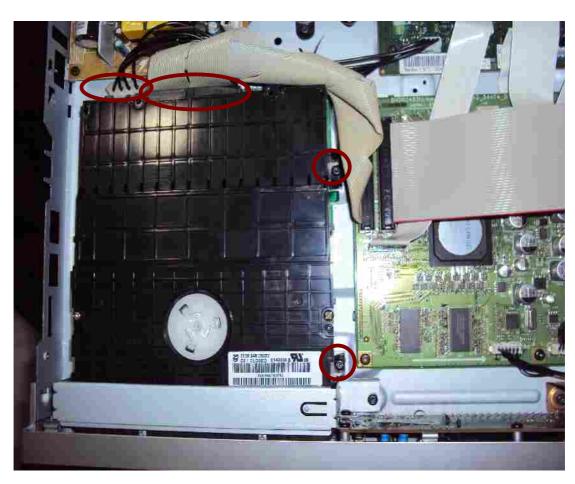

3. Remove the front of the reader-a-catching:



4. Após, retire o leitor de dentro do aparelho:



5. Remove the two screws at the top of the player:






6. Pull the tray and observe the black belt:




7. Remove black belt and replace with new one. Note that the former is removed and, therefore, has several grooves that causes the engine to fail:



8. Upon replacement close the lid and tighten the two screws above:

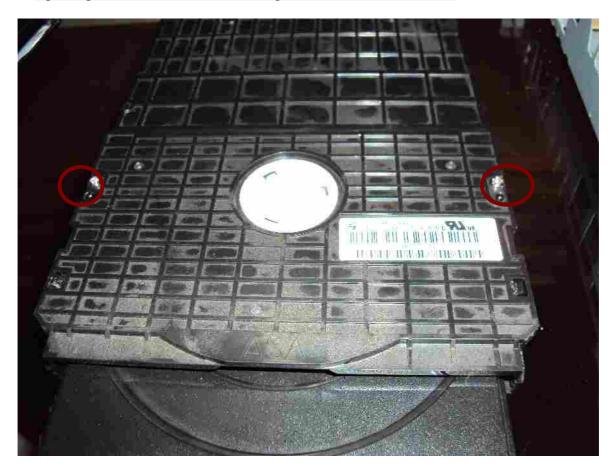

9. Put the DVD back and power connectors and data:

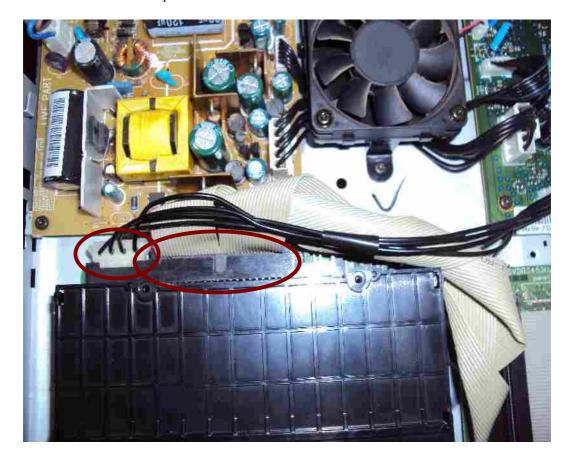

10. With the tray open, put back the cover:






11. Close the tray:




12. Put back the screws:

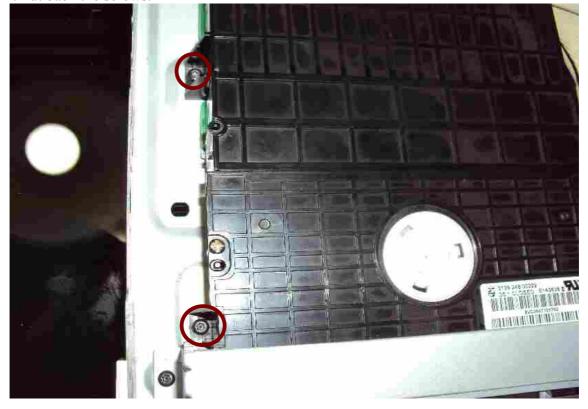



13. Close the cover and put back the screws:



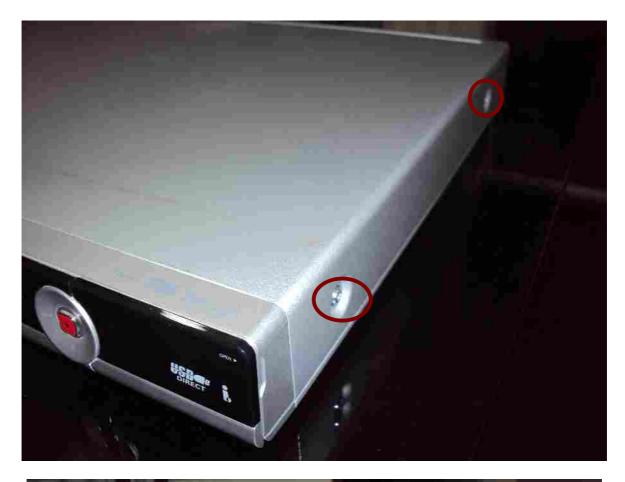



That's it. Any doubts, ask me: lafm@monfardini.com