

JVC PRESETTER PTU94023B



PTU94008



Presetter Functions

For New VCR 'Menu, 28, ok ' for test mode.

For New DVD-R VCR 'Setup Menu, 28, enter ' for test mode.

Presetting Unit	Jig RCU	Common Functions	Note 1
A	7F		
B	72	Fine Adj Slow -	
C	71	Fine Adj Slow +	
D	50	Dynamic Drum	
E	51	Head Switch -	
F	52	Head Switch +	
G	53		
H	54	OSD Postion	Older VHS
K	57	EEPROM Adj Hold 10 sec. for "A:11"	Ch up/dn for value change
M	Function Key	M+ 'Key"	
N	59	Error Code access	
O	5A	Auto Head SW Adj	
	5C	Display check	
M + K	A7	Drum Time	
M + L	A8		
M + M	Function Key		
M + N	A9		
M + O	AA	Factory Adj	On Screen DATA
	Special Feature Codes		
	6F	Master System Reset	Most VHS
	80	Soft reset / exit test mode	
	8B	System Info D-VHS	D-VHS
	9B	Auto Adj Release	D-VHS
	96	SP Head EQ	D-VHS
	91	EP Head EQ	D-VHS
	93	STD/LS3 Auto EQ	D-VHS
	9F	Region-Protection INFO	D-VHS
	9E	FO Data	D-VHS
	9B	Write Data to Flash	D-VHS
	FC	Flash Clear	Nav system
	DVD Recoder Codes		
	6F	Master System Reset	Most VHS

JIG RCU SETUP

PTU94023B

Notes Bulliten

The presetting unit (Part No. PTU94008) currently in use deals with the remote control codes in part, however, the Jig RCU (Part No. PTU94023B) can deal with the remote control codes in whole. Therefore, the custom code A or B and data codes from 00 to FF can be set for the Jig RCU.

When using the Jig RCU as a substitute for the presetting unit, refer to the following comparison table for setting remote control codes.

 
Setup

Hold 4,5,6 and insert batteries

Custom setting	43	VCR Code 'A'	
	53	VCR Code 'B'	
	63	VCR Code 'C'	to be tested
	73	VCR Code 'D'	to be tested

Data	See first page chart
-------------	----------------------

DR-MV1 & Others RCU Codes



Setting the Jig RCU mode

(1) Turn on the power.

(2) Press the "VCR/DVD" button repeatedly on the unit so that the VCR lamp lights up on the unit.

(3) Press the following remocon keys continuously within 2 seconds
" SET UP " → " 2 " → " 8 " → " ENTER ".

When the VCR is set to the Jig RCU mode, the symbols (" : ") in the time display of the FDP are blinking.
(Refer to Fig.2-2a User/Jig RCU mode)

Alternate Method

Setting the User RCU mode

(1) Turn off the power.

(2) Press the "REC" and "PAUSE" buttons of the VCR simultaneously.
Alternatively, transmit the code "9D" from the Jig RCU.

When the unit is set to JIG mode and when the unit is under JIG mode, the remote control unit attached to product operates only in "Remote Control Code 1".

Since the unit is in "Remote Control Code 3" when it is shipped and just after its batteries are changed, "Remote Control Code 3" needs to be changed to "Remote Control Code 1."

• Confirm the RCU mode when exchanging parts.
Since some SERVICE PARTS sets the VCR to the Jig RCU mode as initial setting. Therefore please set the VCR to the user RCU mode after replacing the EEPROM.

DVD Recoder Codes				
43	6F		Master System Reset	Most VHS
43	80		Soft reset / exit test mode	
43	8B		System Info Screen	DR-MV1
43	70		SYSTEM UPGRADE MODE	DR-MV1
43	F2		REGION Code confirm	DR-MV1

43	9D		RCU mode EXIT	DR-MV1