

## Video Stabilizer

By activating the Video Stabilizer you can correct vertical vibrations in the picture when playing back unstable EP recordings that were made on another VCR. When this function is set to "ON", vertical vibration will be automatically corrected.  
\*The default setting is "OFF".

### ACCESS MAIN MENU SCREEN

**1** Press **MENU**.

### ACCESS FUNCTION SET SCREEN

**2** Move the highlight bar (arrow) to "FUNCTION SET" by pressing **CH ▲▼** or **TIME SCAN ▲▼**, then press **OK** or **TIME SCAN ▷**.

MAIN MENU	
→ <b>FUNCTION SET</b>	
TUNER SET	
INITIAL SET	
HI-FI REC LEVEL CTL	
PRESS (▲, ▼), THEN (OK)	
PRESS (MENU) TO END	

### ACTIVATE VIDEO STABILIZER

**3** Move the highlight bar (arrow) to "VIDEO STABILIZER" by pressing **CH ▲▼** or **TIME SCAN ▲▼**, then press **OK** or **TIME SCAN ▷** to set to "ON".


FUNCTION	
AUTO TIMER	OFF
SUPERIMPOSE	ON
AUTO SP→EP TIMER	OFF
DIGITAL R3	ON
→ <b>VIDEO STABILIZER</b>	<b>OFF</b>
2ND AUDIO RECORD	OFF
NEXT PAGE	
SELECT WITH (▲, ▼) AND (OK)	
PRESS (MENU) TO END	

### RETURN TO NORMAL SCREEN

**4** Press **MENU**.

### NOTES:

- Regardless of the setting, this function has no effect with SP recordings, during recording and during special-effects playback.
- When you finish viewing the tape, be sure to set it back to "OFF".

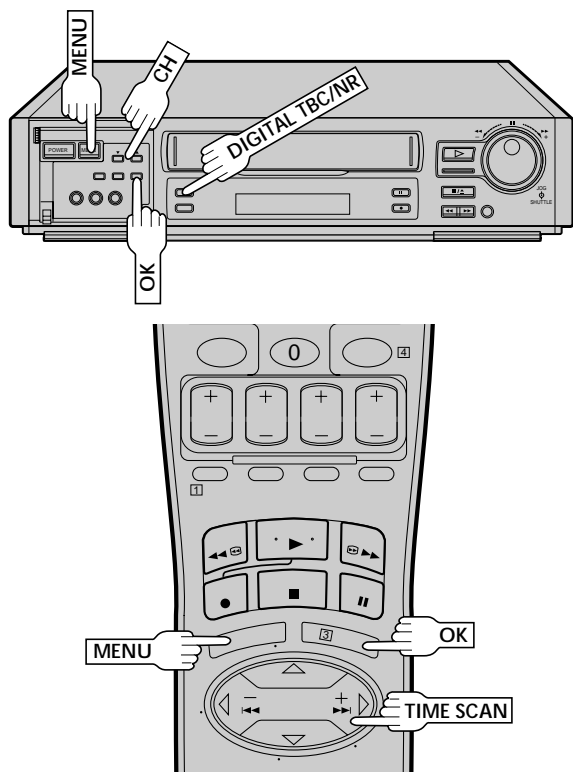

## Digital TBC/NR

Your VCR is equipped with the Digital TBC (Time Base Corrector) that removes jitter from fluctuating video signals to deliver a stable picture even with old tapes and rental cassettes. The on/off of Digital 3-DNR (Noise Reduction) which cuts noise and enables clear picture reproduction is also linked to this function.

\* The default setting is "ON".

We recommend that you use the Digital TBC feature when...

- ... playing back a tape recorded on a camcorder.
- ... playing back a tape repeatedly used.
- ... using this VCR as the player for editing.

## 1 SELECT DIGITAL TBC/NR SET MODE

Press **DIGITAL TBC/NR** so that the button lights up.

- Pressing the button again turns off this function.

### NOTES:

- If you play back a tape recorded under poor TV reception condition, there may be cases where the picture becomes more stable with Digital TBC/NR set to off.
- When Digital TBC/NR is set to on, if you play back a tape where certain types of signals are recorded (using a PC or some character generators), the playback picture may be distorted. If this is the case, turn off Digital TBC/NR.
- Digital TBC/NR and Video Stabilizer (pg. 26) cannot be used at the same time; if you turn on Digital TBC/NR when "VIDEO STABILIZER" is set to "ON", Video Stabilizer will be automatically turned "OFF". Make sure Digital TBC/NR is off when you want to use Video Stabilizer.

## Digital R3

Digital R3 picture system applies edge correction to the luminance signal to enhance detail.

## 1 ACCESS MAIN MENU SCREEN

Press **MENU**.

## 2 ACCESS FUNCTION SET SCREEN

Press **CH▲▼** or **TIME SCAN ▲▼** to move the highlight bar (arrow) to "FUNCTION SET", then press **OK** or **TIME SCAN ▷**.

MAIN MENU	
→ <b>FUNCTION SET</b>	
TUNER SET	
INITIAL SET	
HI-FI REC LEVEL CTL	
PRESS (▲,▼), THEN (OK) PRESS (MENU) TO END	

## 3 SELECT DIGITAL R3 SET MODE

Press **CH▲▼** or **TIME SCAN ▲▼** to move the highlight bar (arrow) to "DIGITAL R3", then press **OK** or **TIME SCAN ▷** to set to "ON".

FUNCTION	
AUTO TIMER	OFF
SUPERIMPOSE	ON
AUTO SP→EP TIMER	OFF
→ <b>DIGITAL R3</b>	<b>ON</b>
VIDEO STABILIZER	OFF
2ND AUDIO RECORD	OFF
NEXT PAGE	
SELECT WITH (▲,▼) AND (OK) PRESS (MENU) TO END	

## 4 RETURN TO NORMAL SCREEN

Press **MENU**.

### NOTES:

- Normally it is recommendable to keep "DIGITAL R3" set to "ON".
- Depending on the type of tape being used, picture quality may be better with "DIGITAL R3" set to "OFF".
- If you use this VCR as the player for editing, be sure to set "DIGITAL R3" to "OFF" before starting.